





8W-51 REAR LIGHTING

Component	Page	Component	Page
Automatic Day/Night Mirror	8W-51-6, 7	Left Rear Fog Lamp	8W-51-8
Back-Up Lamp	8W-51-6, 7	Left Rear Lamp Assembly	8W-51-2, 3, 5, 6, 7, 8
Body Control Module	8W-51-2, 3, 8	License Lamp No. 1	8W-51-4
Brake Lamp Switch	8W-51-5	License Lamp No. 2	8W-51-4
Center High Mounted Stop Lamp	8W-51-5	Park Lamp Relay	8W-51-2, 3
Controller Anti-Lock Brake	8W-51-5	Park/Neutral Position Switch	8W-51-6, 7
Fuse 6 (JB)	8W-51-2, 3	Rear Fog Lamp Relay	8W-51-8
Fuse 23 (JB)	8W-51-5	Right Rear Fog Lamp	8W-51-8
Fuse 27 (JB)	8W-51-8	Right Rear Lamp Assembly	8W-51-2, 3, 5, 6, 7, 8
G200	8W-51-2, 3	Tail/Stop Lamp	8W-51-2, 3, 5
G300	8W-51-2, 3, 5, 6, 7, 8	Trailer Tow Brake Lamp Relay	8W-51-5
G301	8W-51-2, 3, 4, 5, 6, 7, 8	Trailer Tow Connector	8W-51-6, 7, 8
Junction Block	8W-51-2, 3, 5, 8	Transmission Solenoid/TRS Assembly	8W-51-6, 7

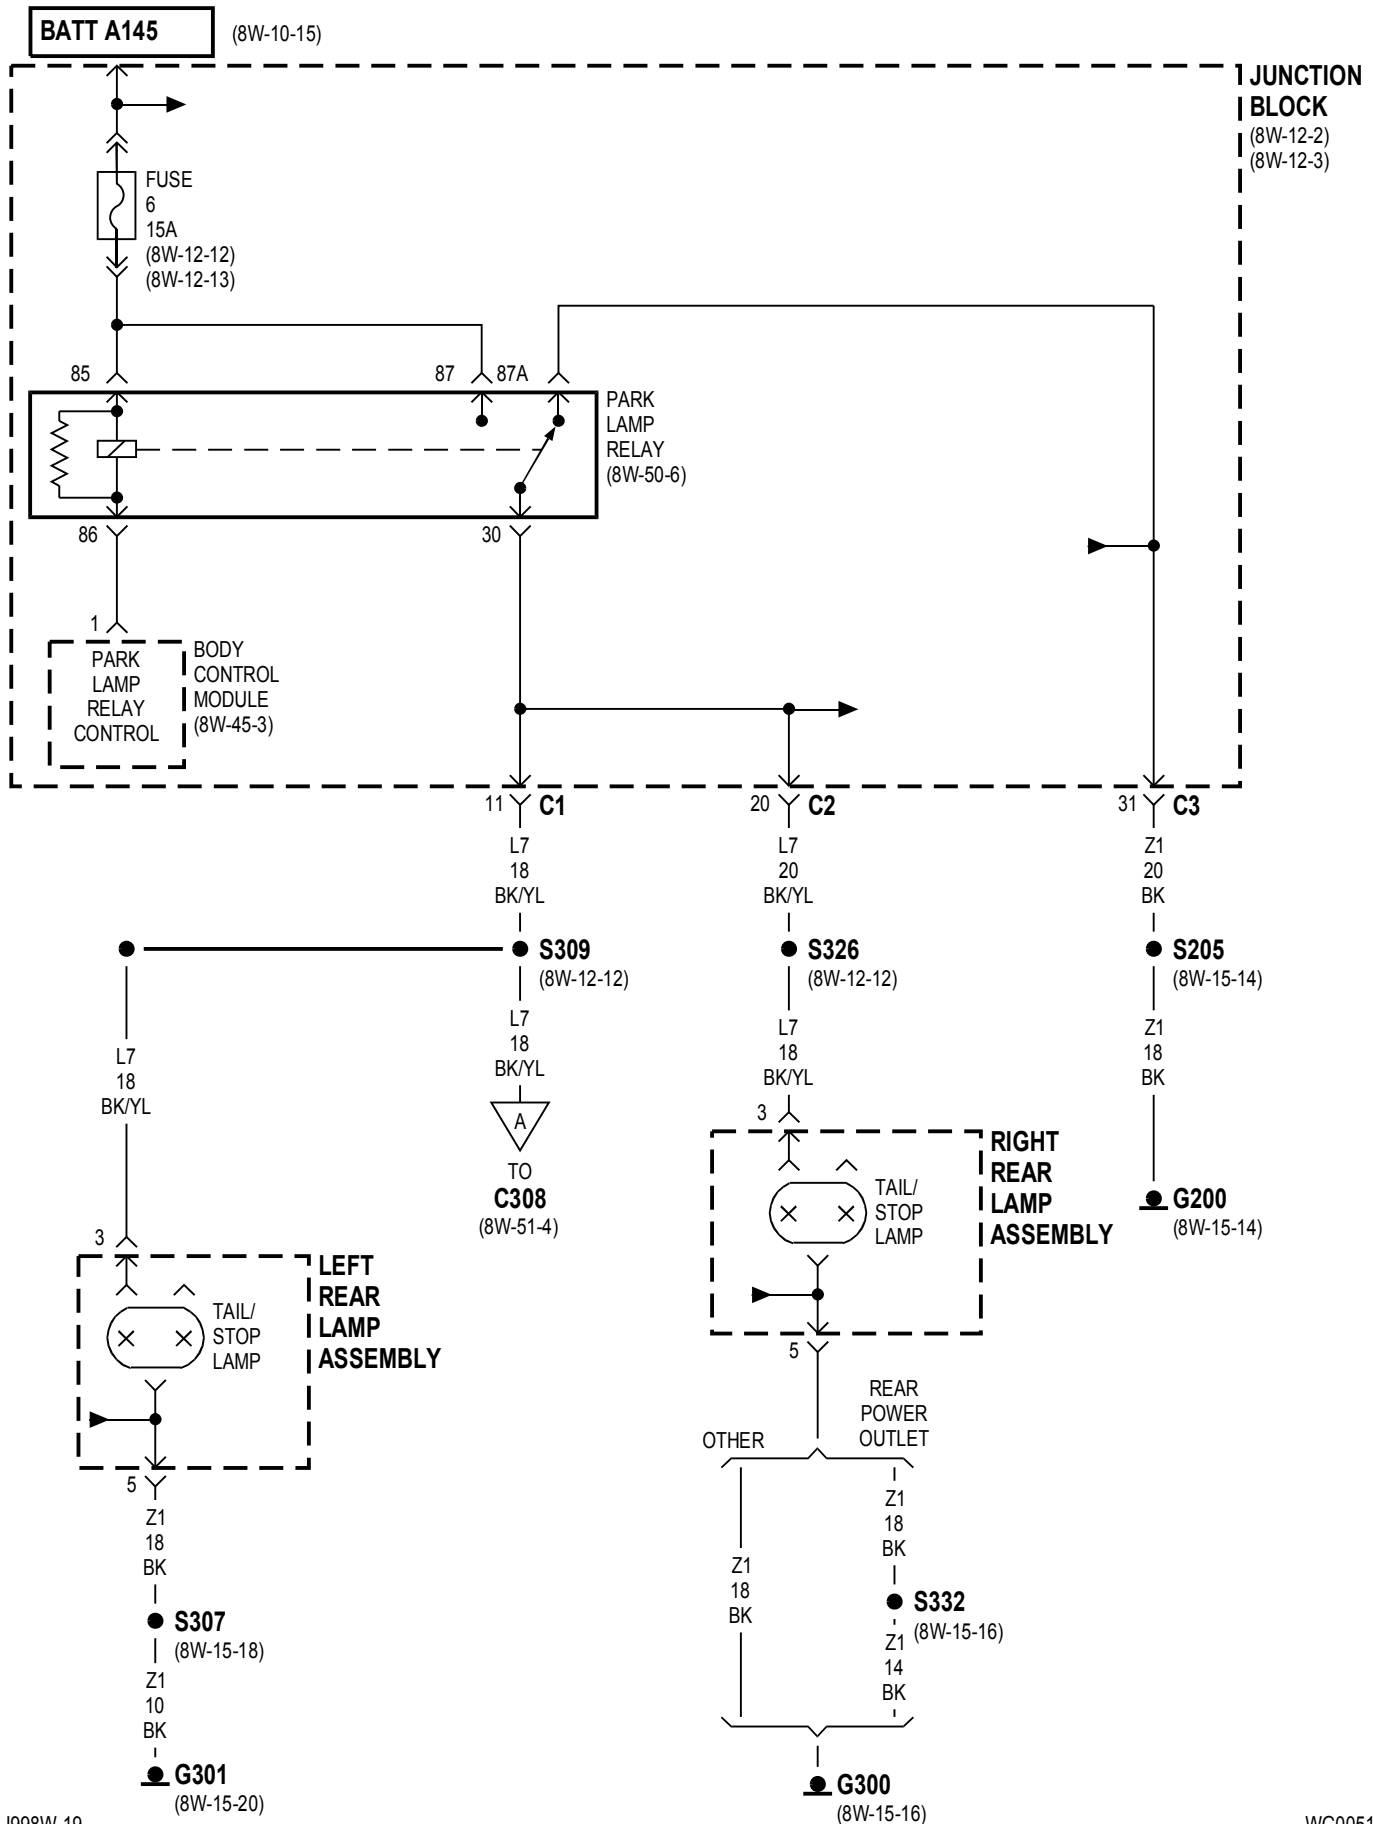


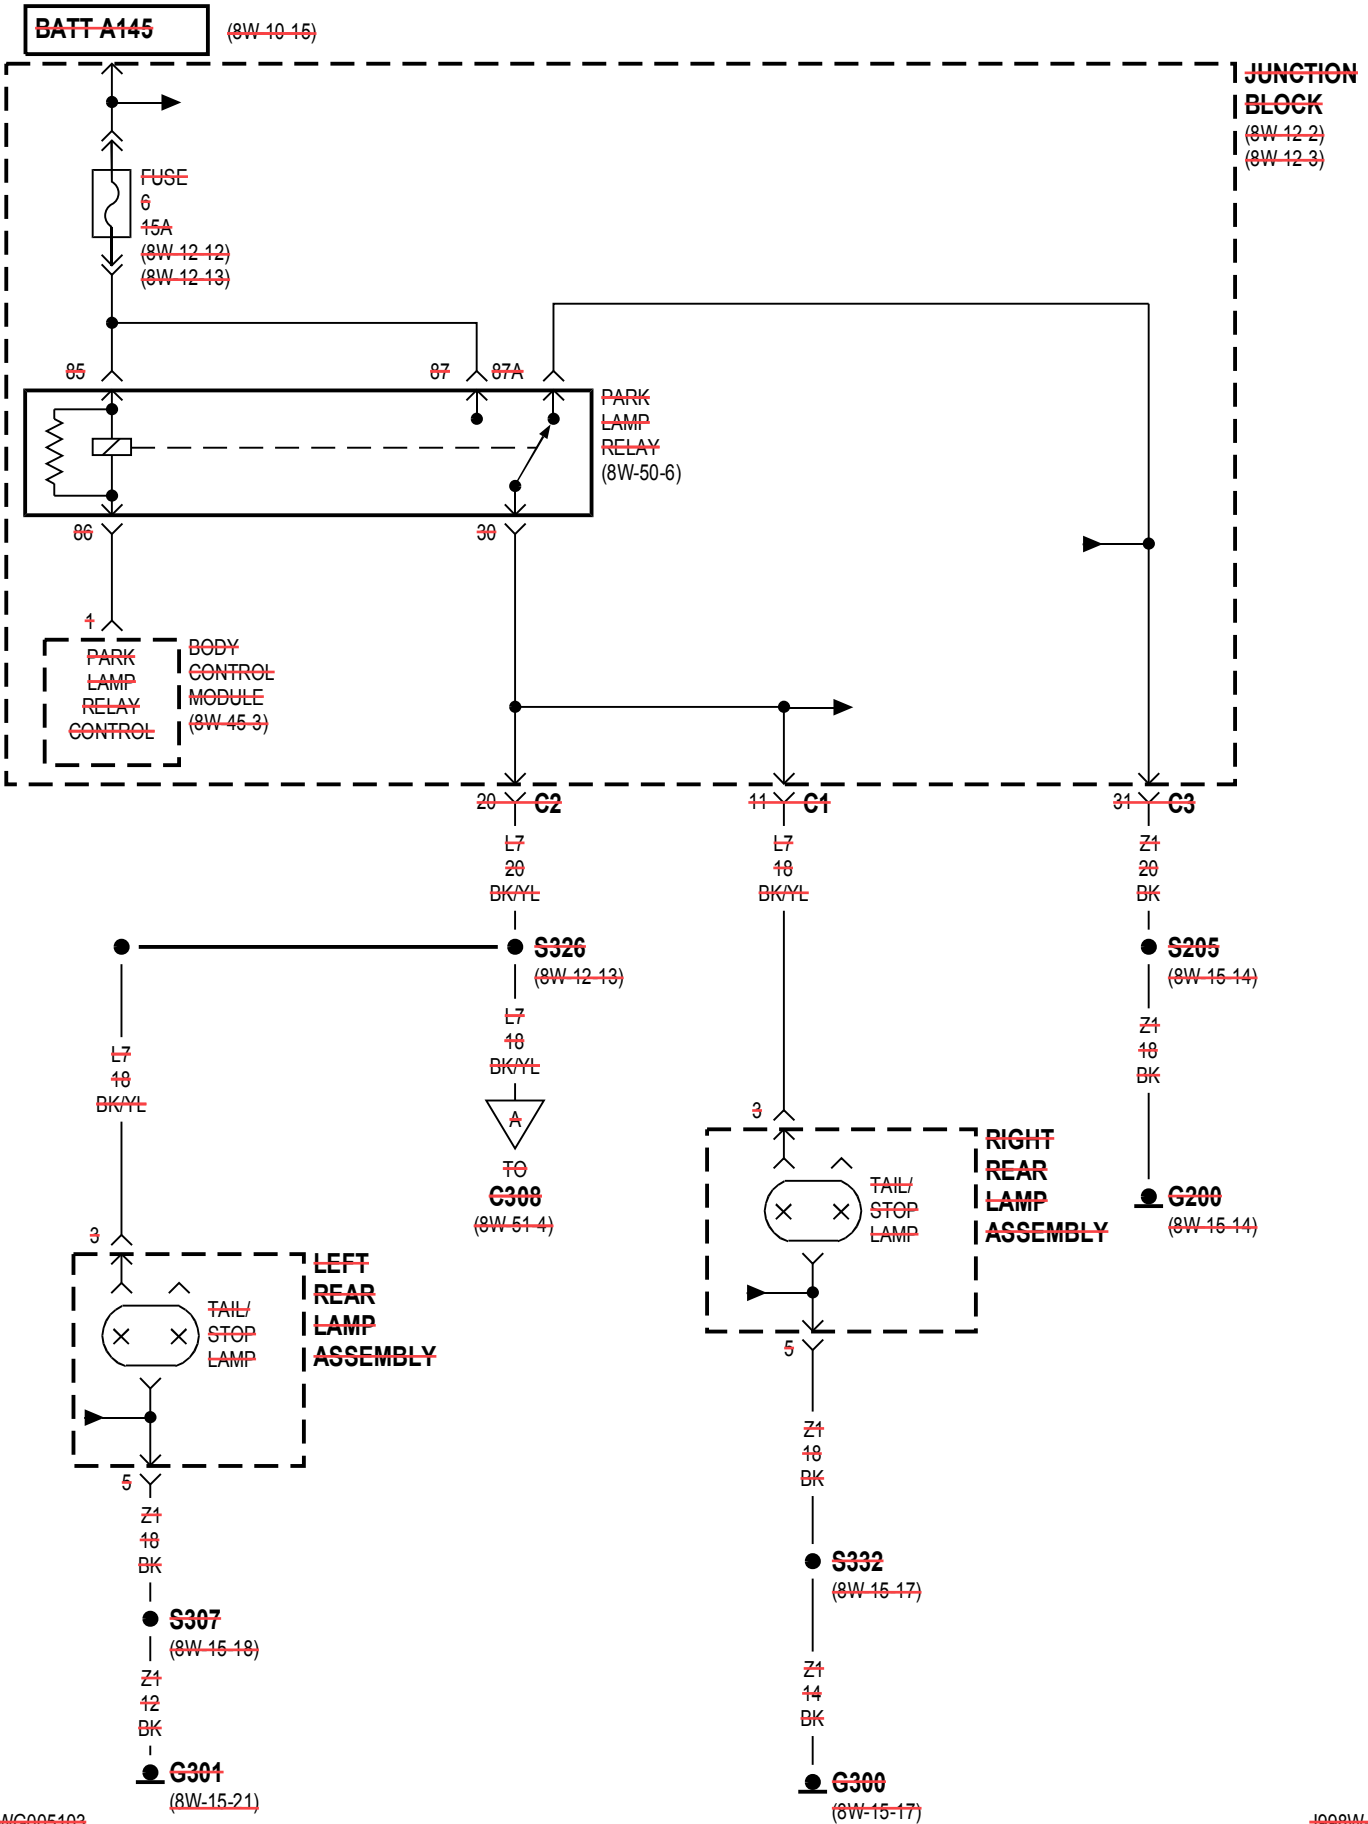

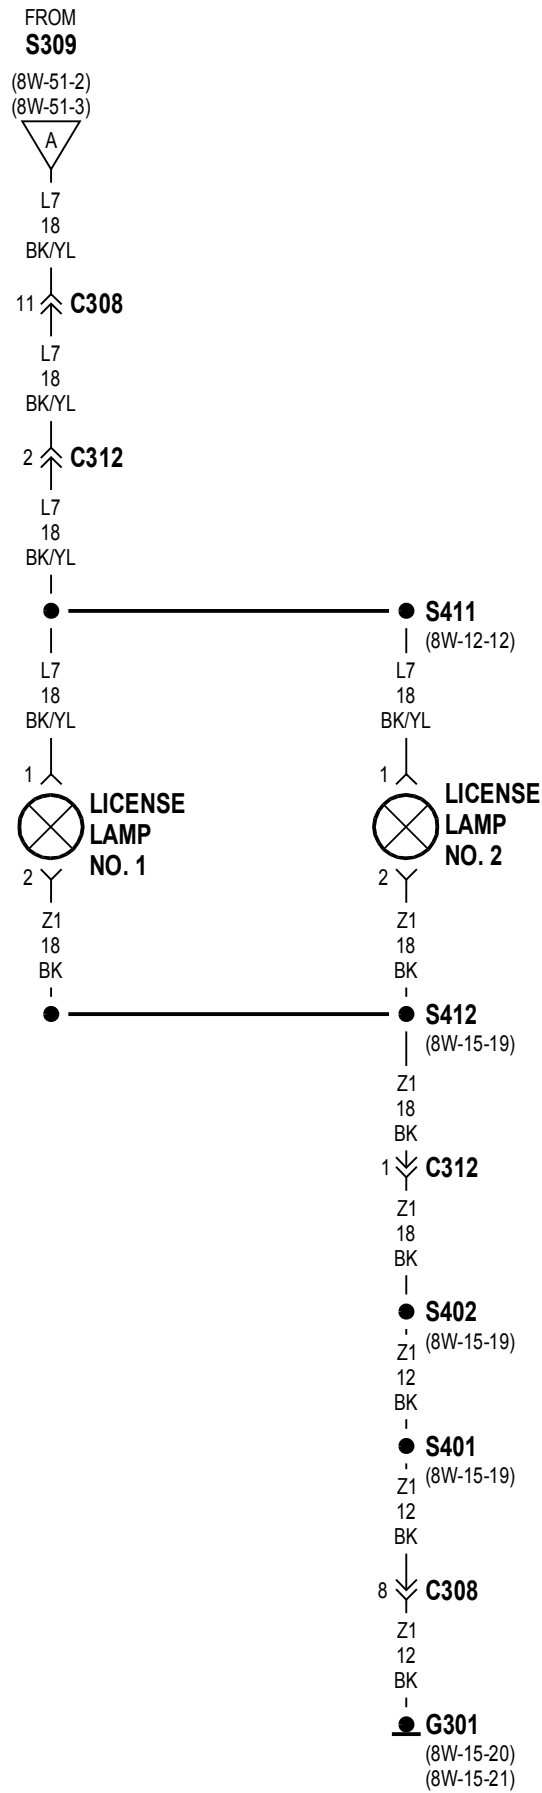


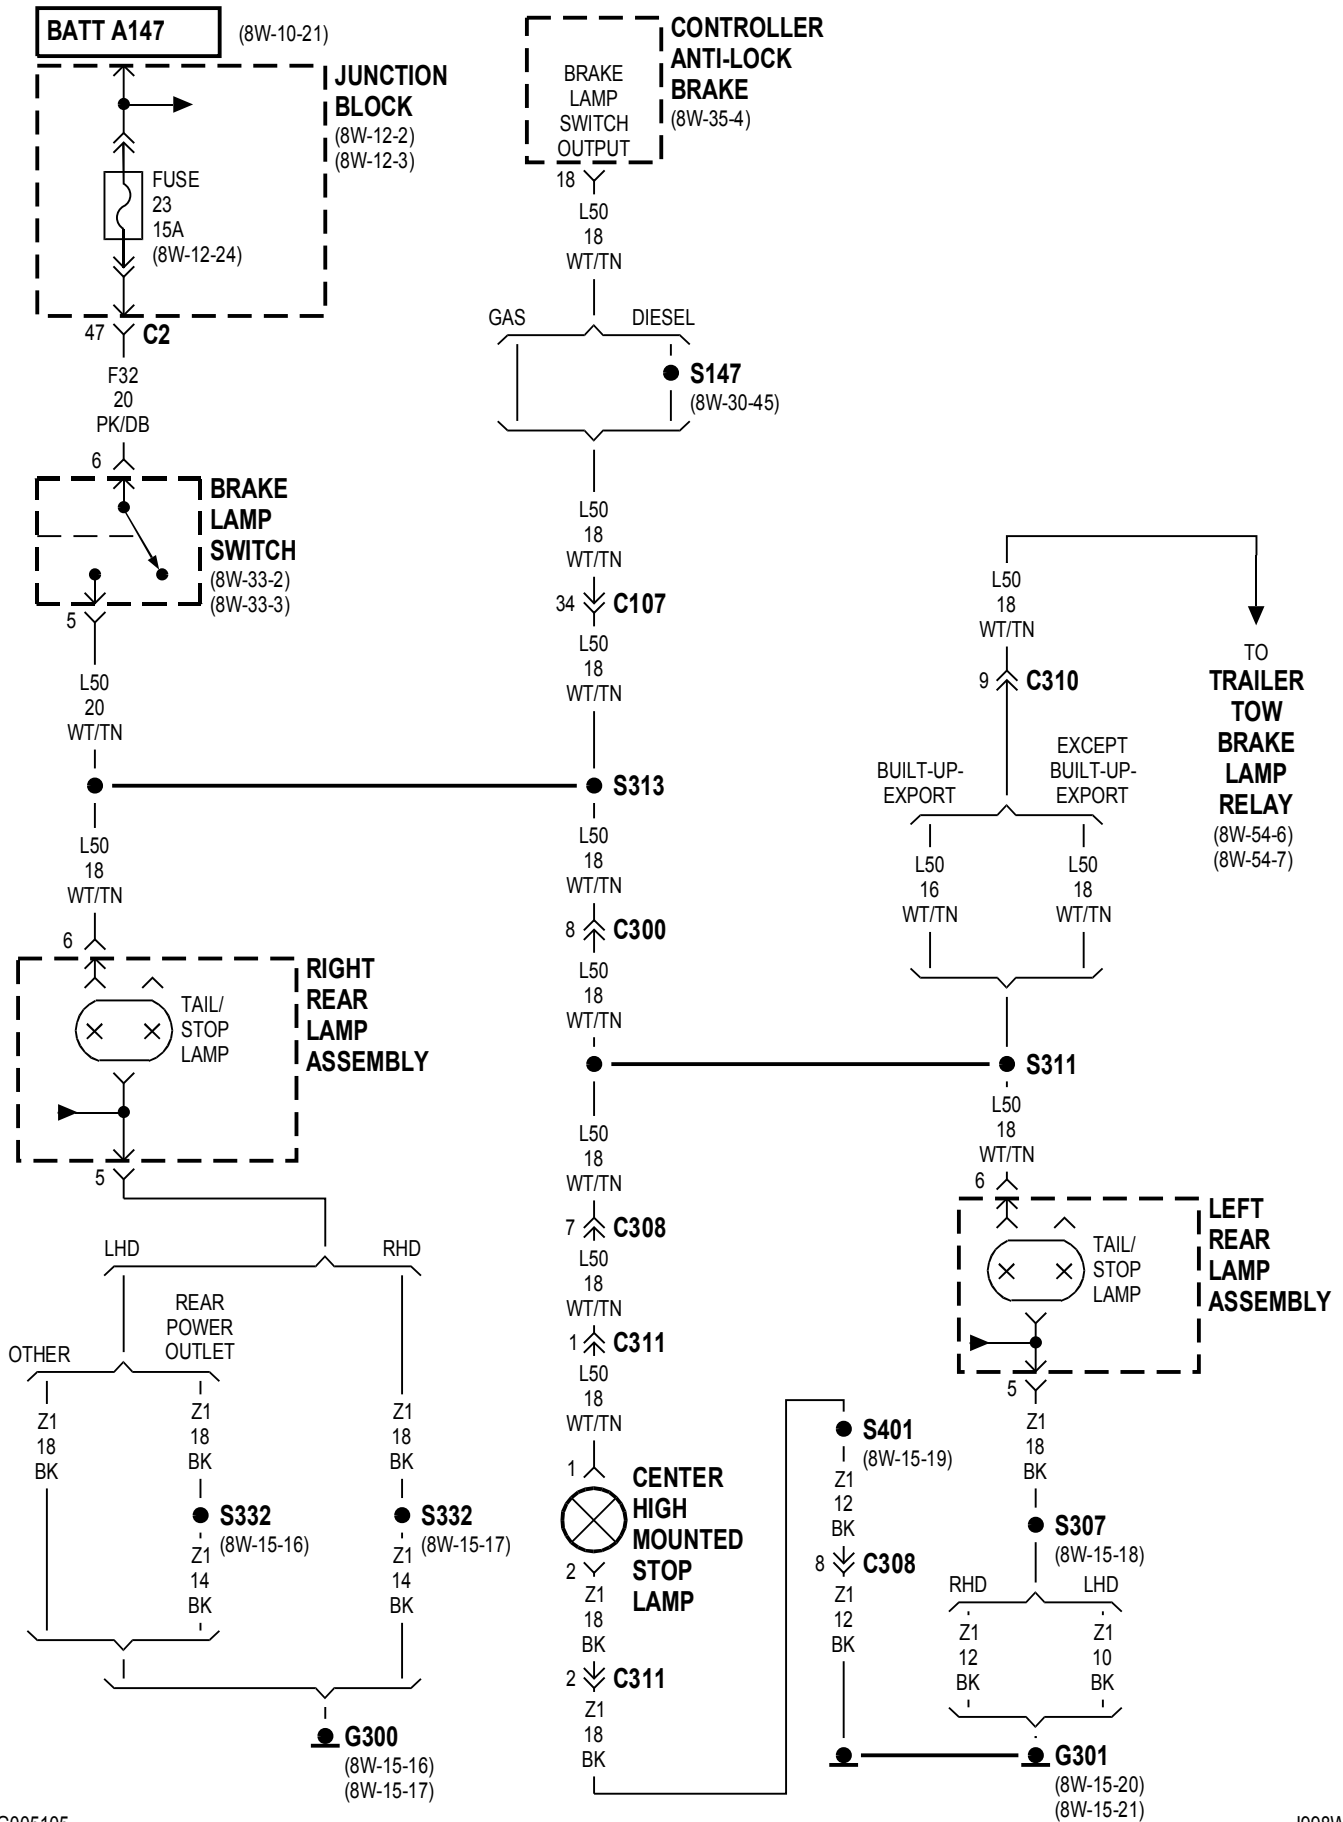


LHD

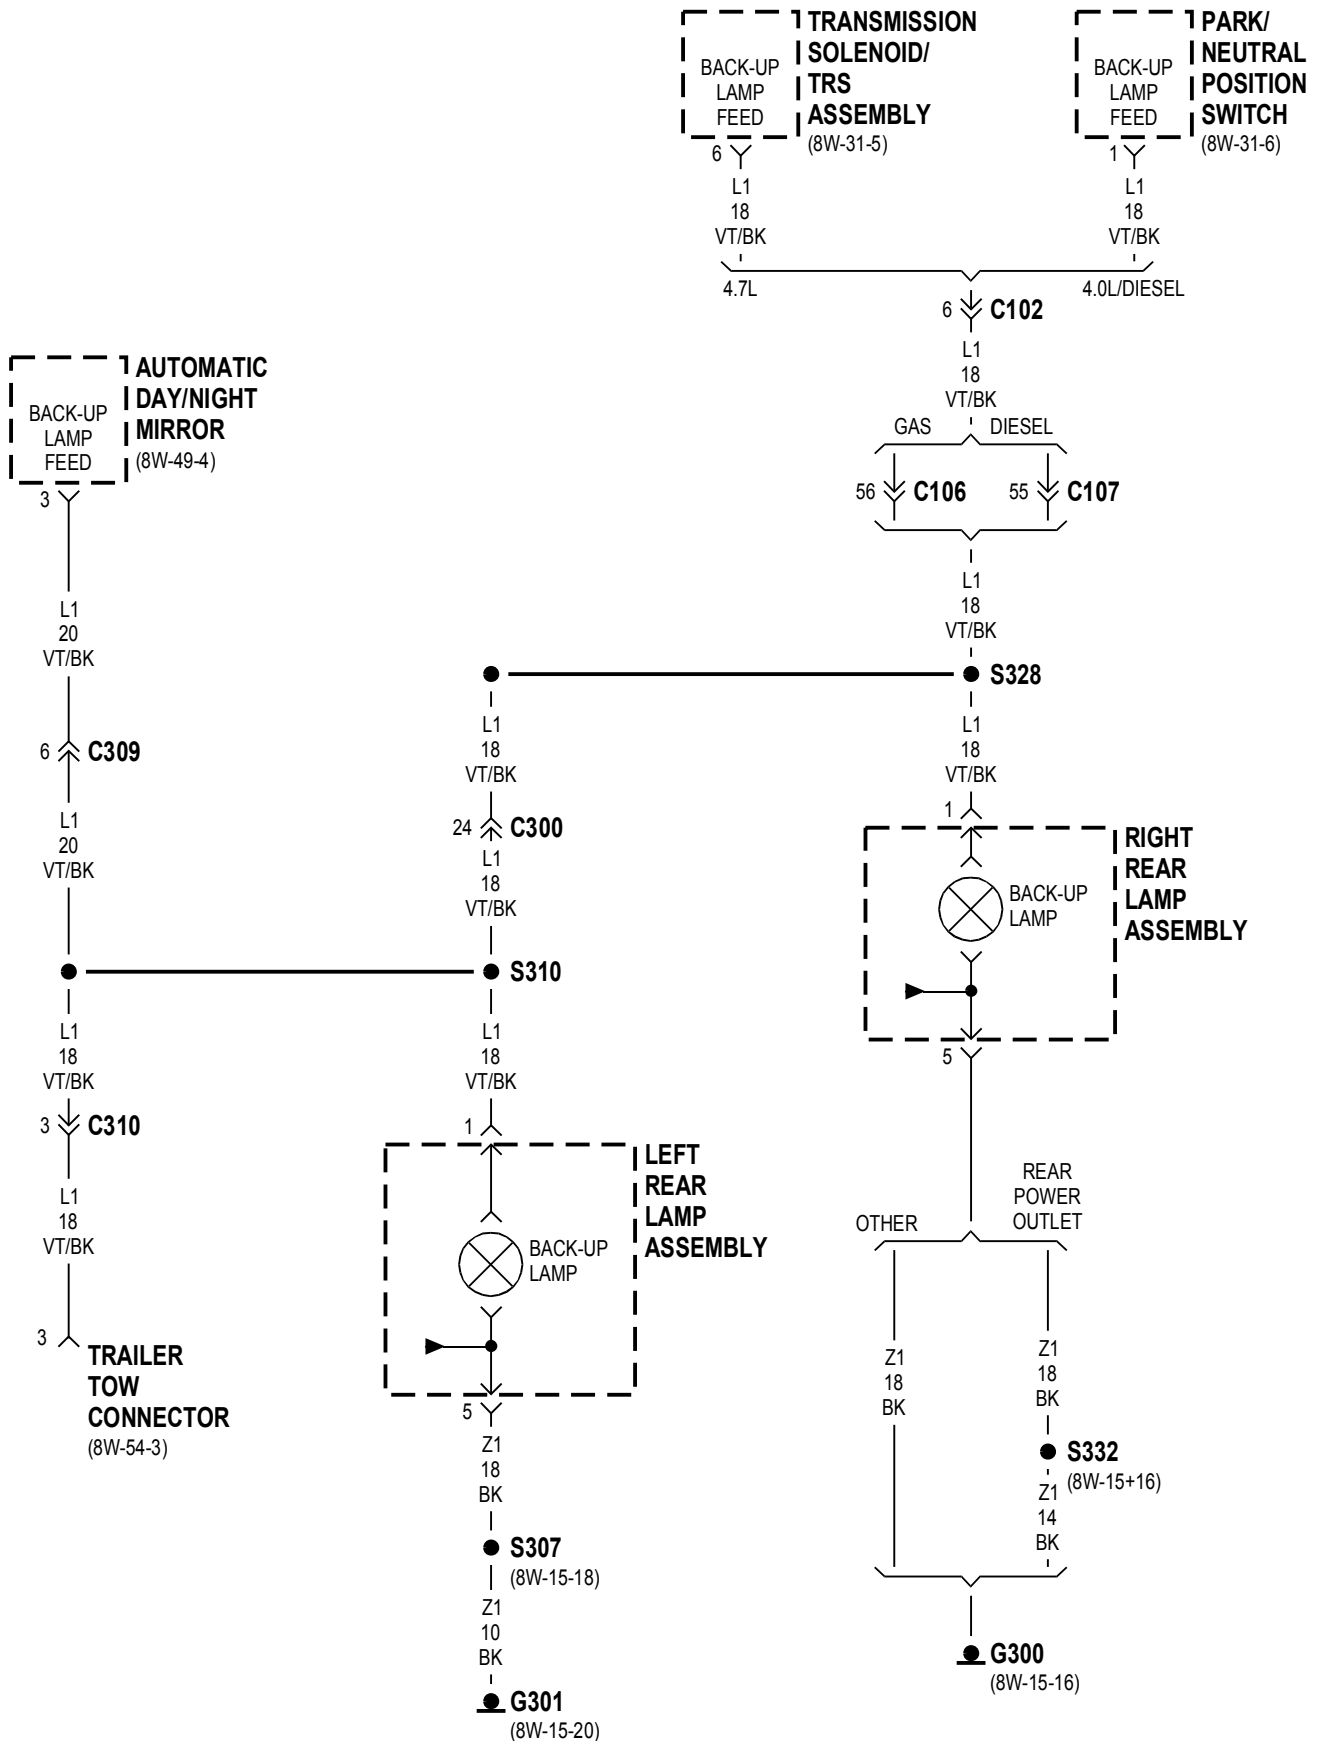


RHD

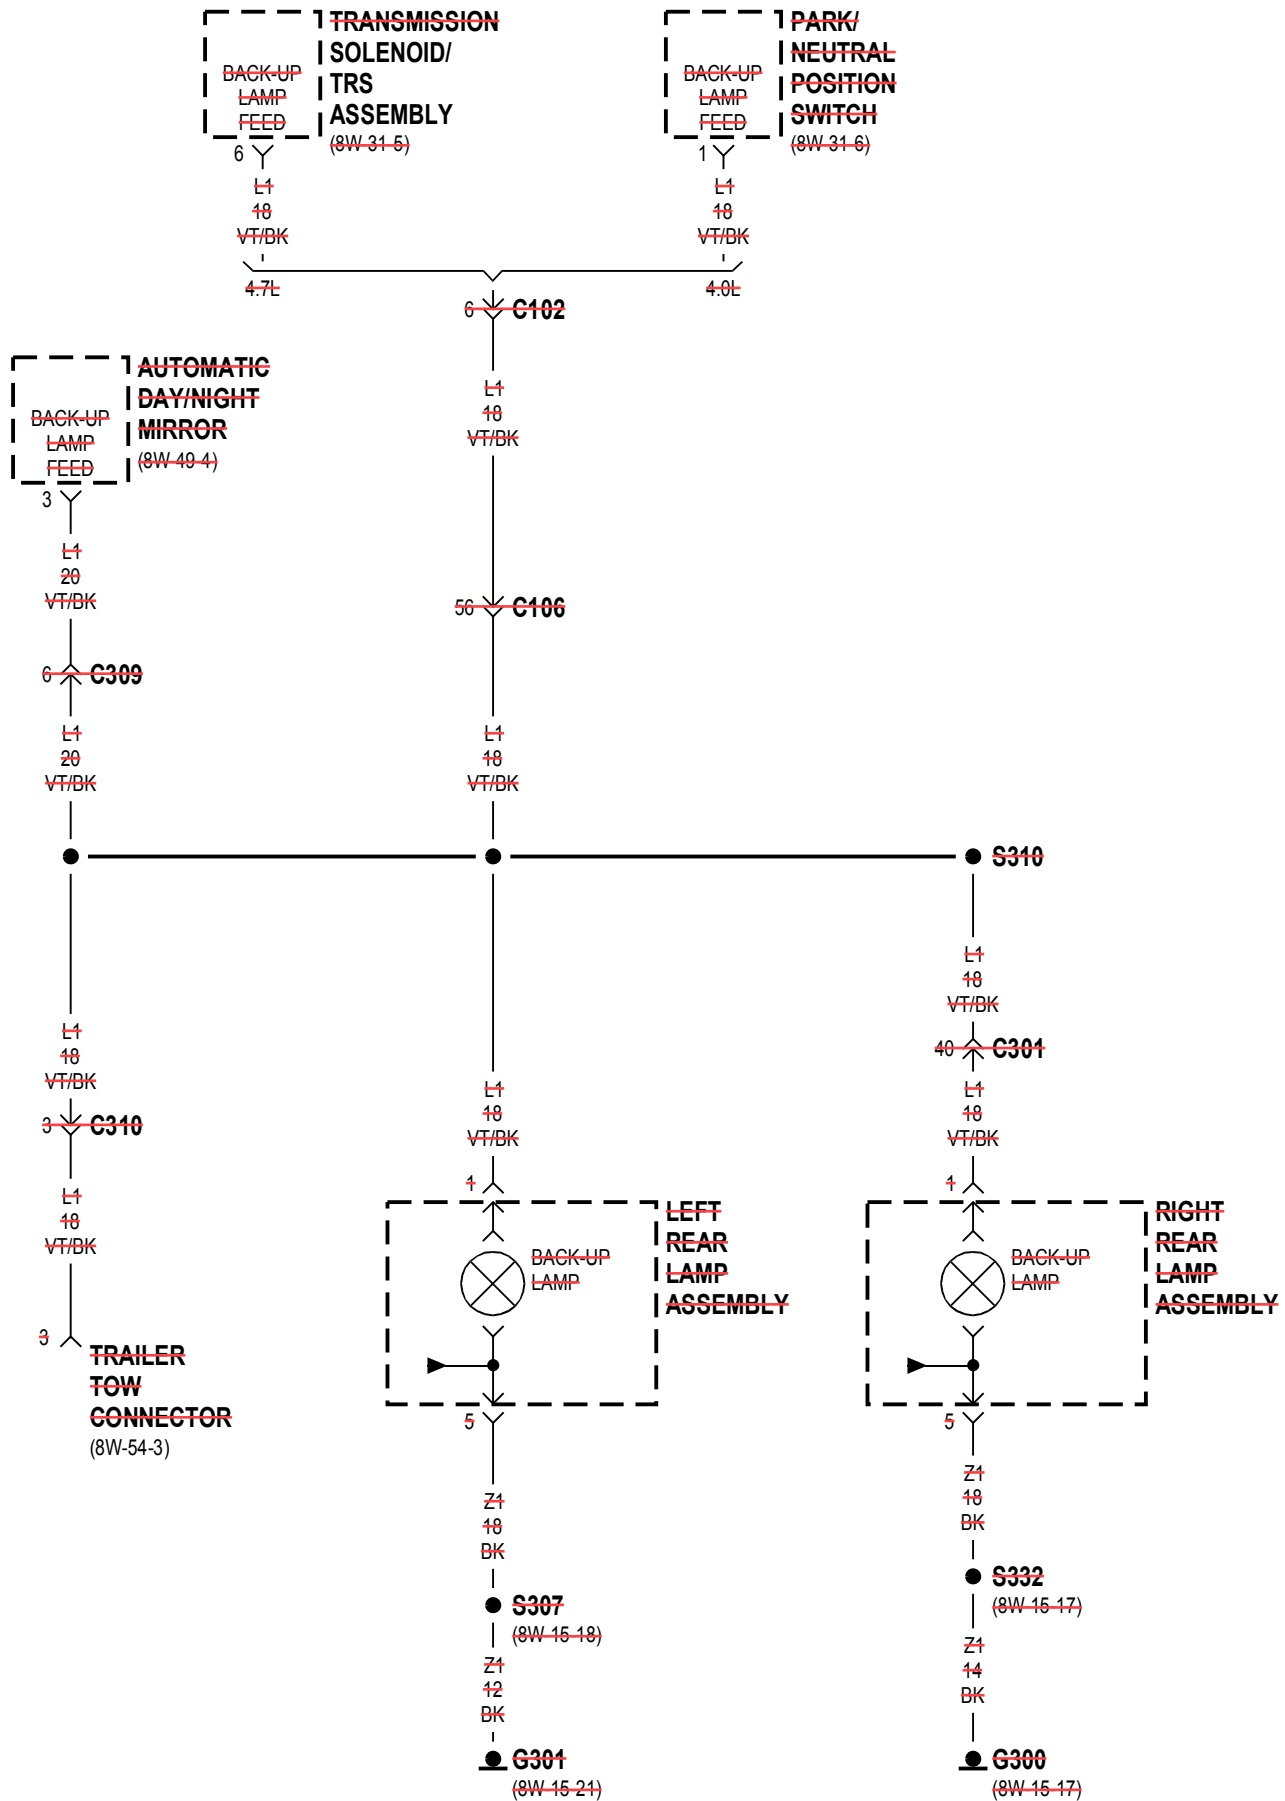


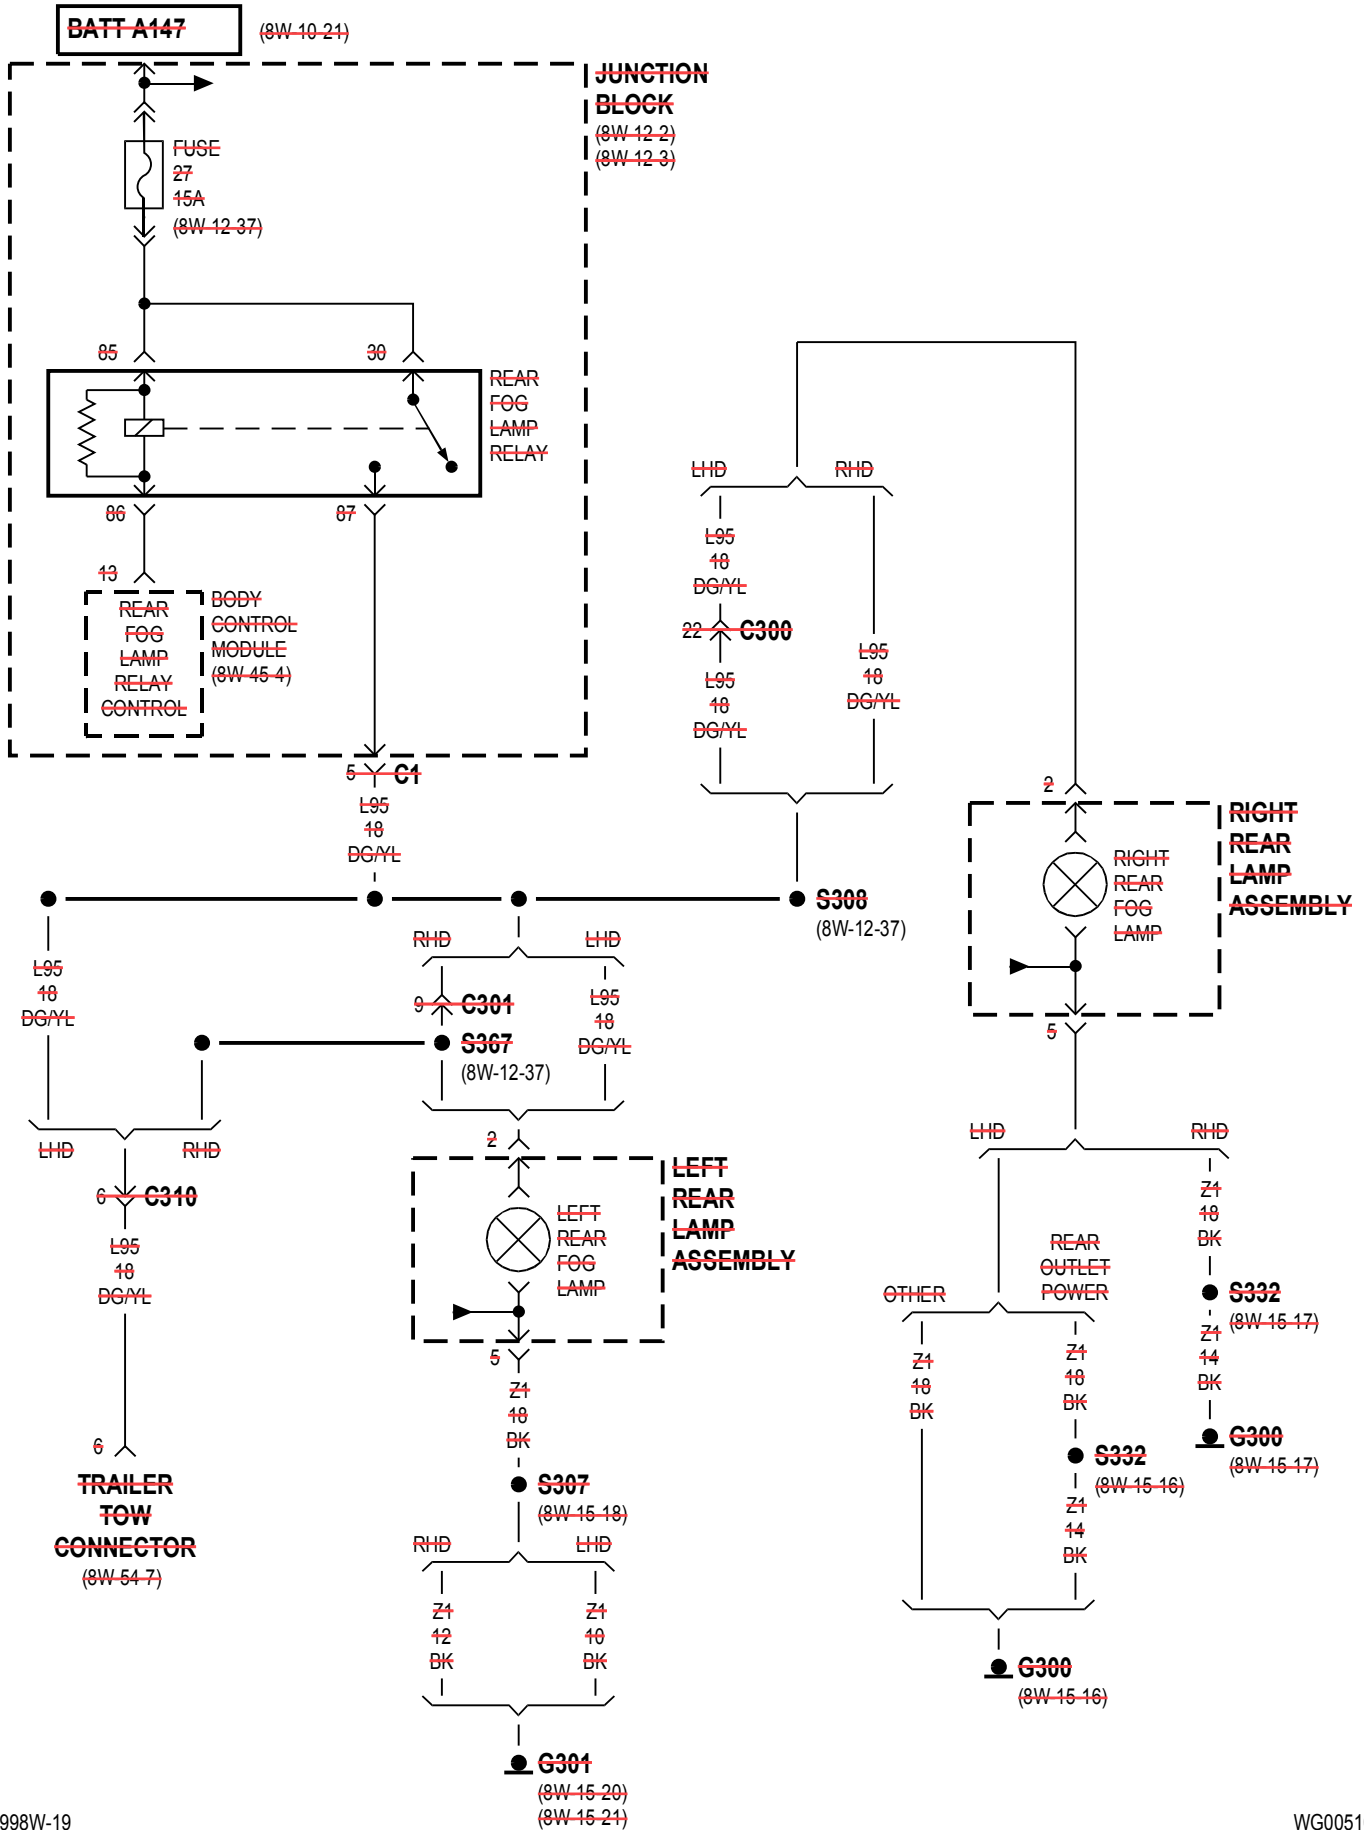



8W-52 TURN SIGNALS


Component	Page	Component	Page
Body Control Module	8W-52-3, 5	Left Multi- Function Switch	8W-52-2
Combination Flasher	8W-52-2, 3, 5, 7, 8	Left Rear Lamp Assembly	8W-52-7, 8
Fuse 4 (JB)	8W-52-2	Left Side Repeater	8W-52-5
Fuse 6 (JB)	8W-52-3, 5	Park Lamp Relay	8W-52-3, 5
Fuse 20 (JB)	8W-52-2	Right Front Side Marker Lamp	8W-52-4
G106	8W-52-6	Right Front Park Lamp	8W-52-4
G108	8W-52-4	Right Front Park/Turn Signal Lamp	8W-52-4
G200	8W-52-2, 3, 5	Right Front Turn Signal Lamp	8W-52-4
G300	8W-52-7, 8	Right Rear Lamp Assembly	8W-52-3, 7, 8
G301	8W-52-7, 8	Right Side Repeater	8W-52-3
Junction Block	8W-52-2, 3, 5, 7, 8	Trailer Tow Left Turn Relay	8W-52-7, 8
Left Front Side Marker Lamp	8W-52-6	Trailer Tow Right Turn Relay	8W-52-7, 8
Left Front Park Lamp	8W-52-6	Turn Signal Lamp	8W-52-7, 8
Left Front Park/Turn Signal Lamp	8W-52-6	United Kingdom Security System Module	8W-52-2

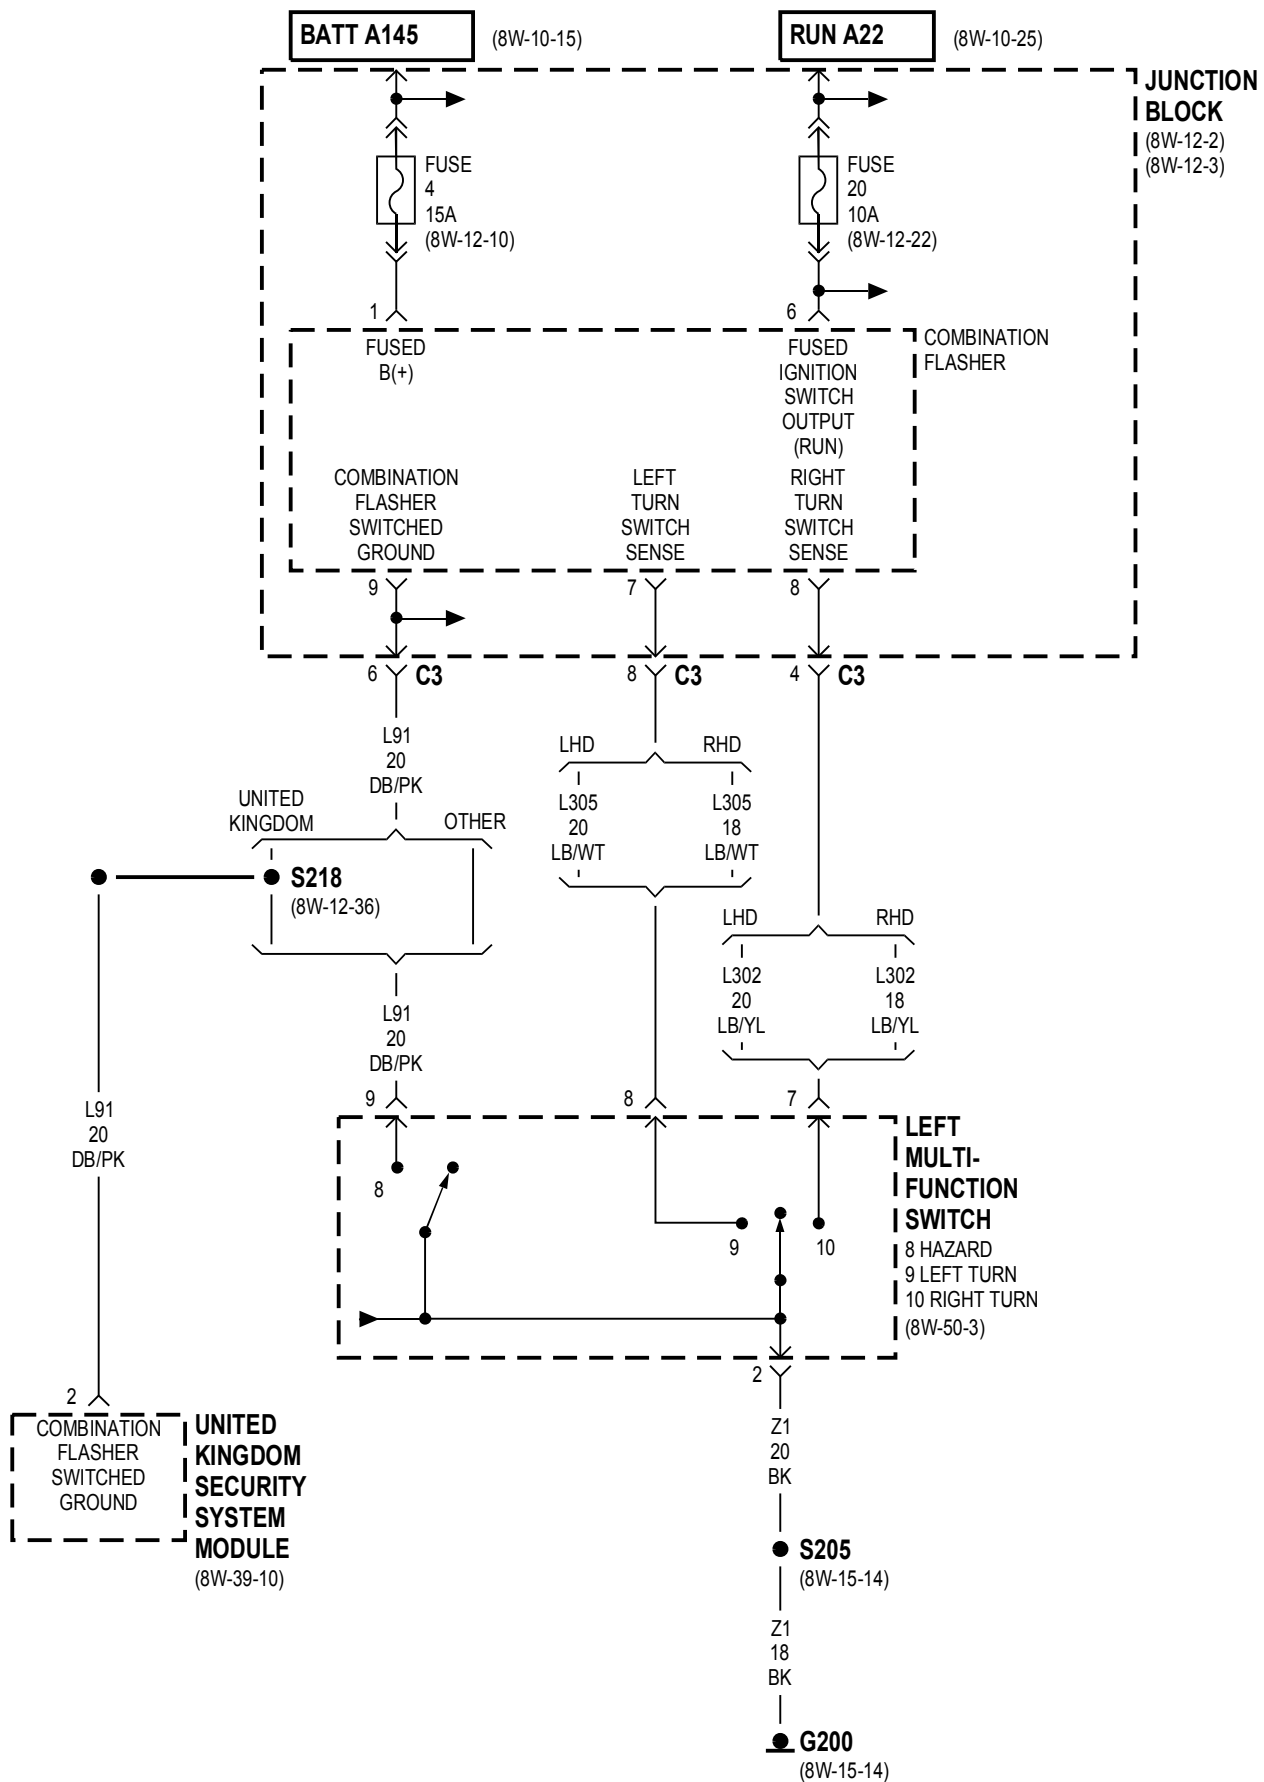


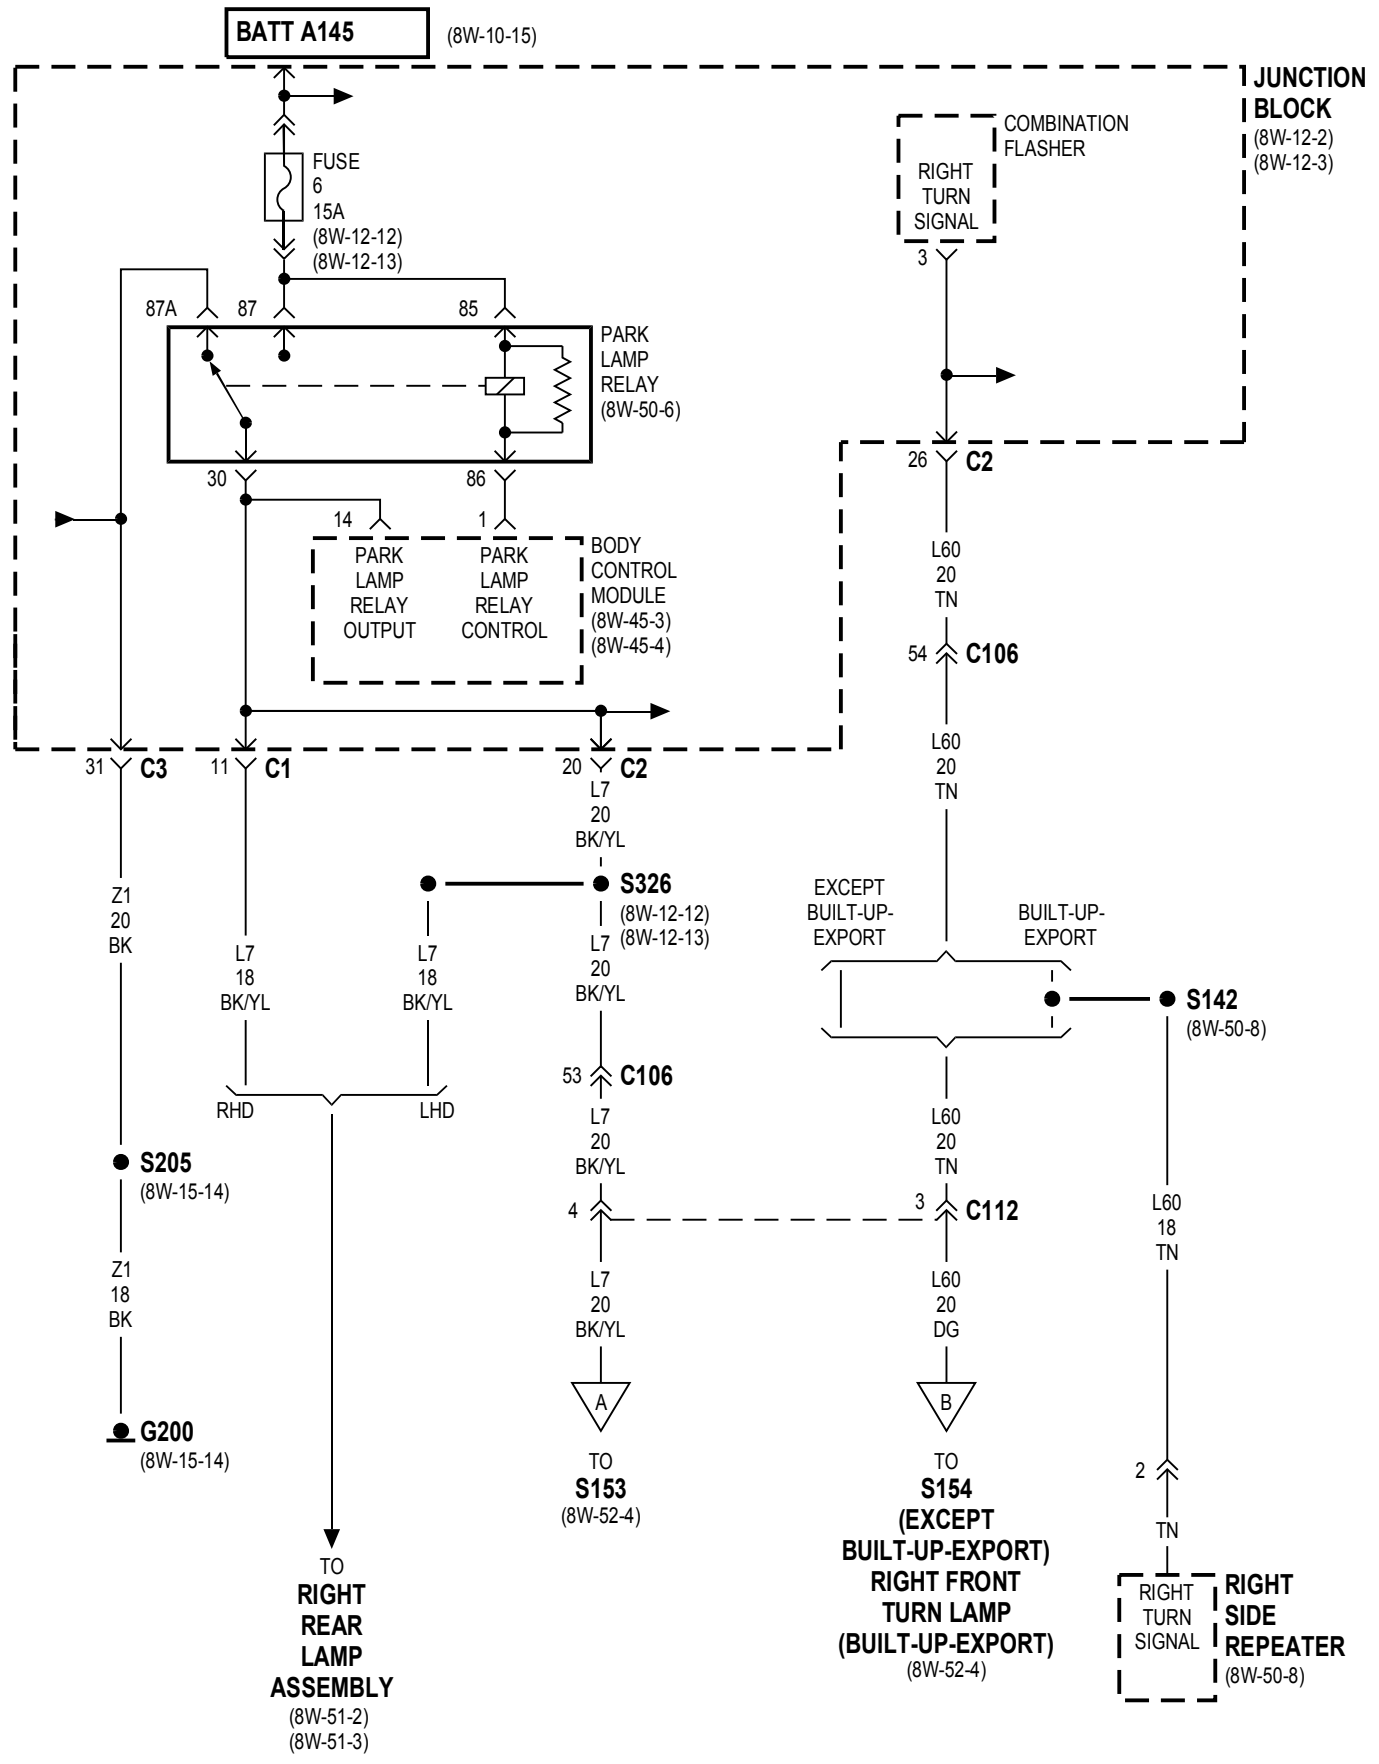


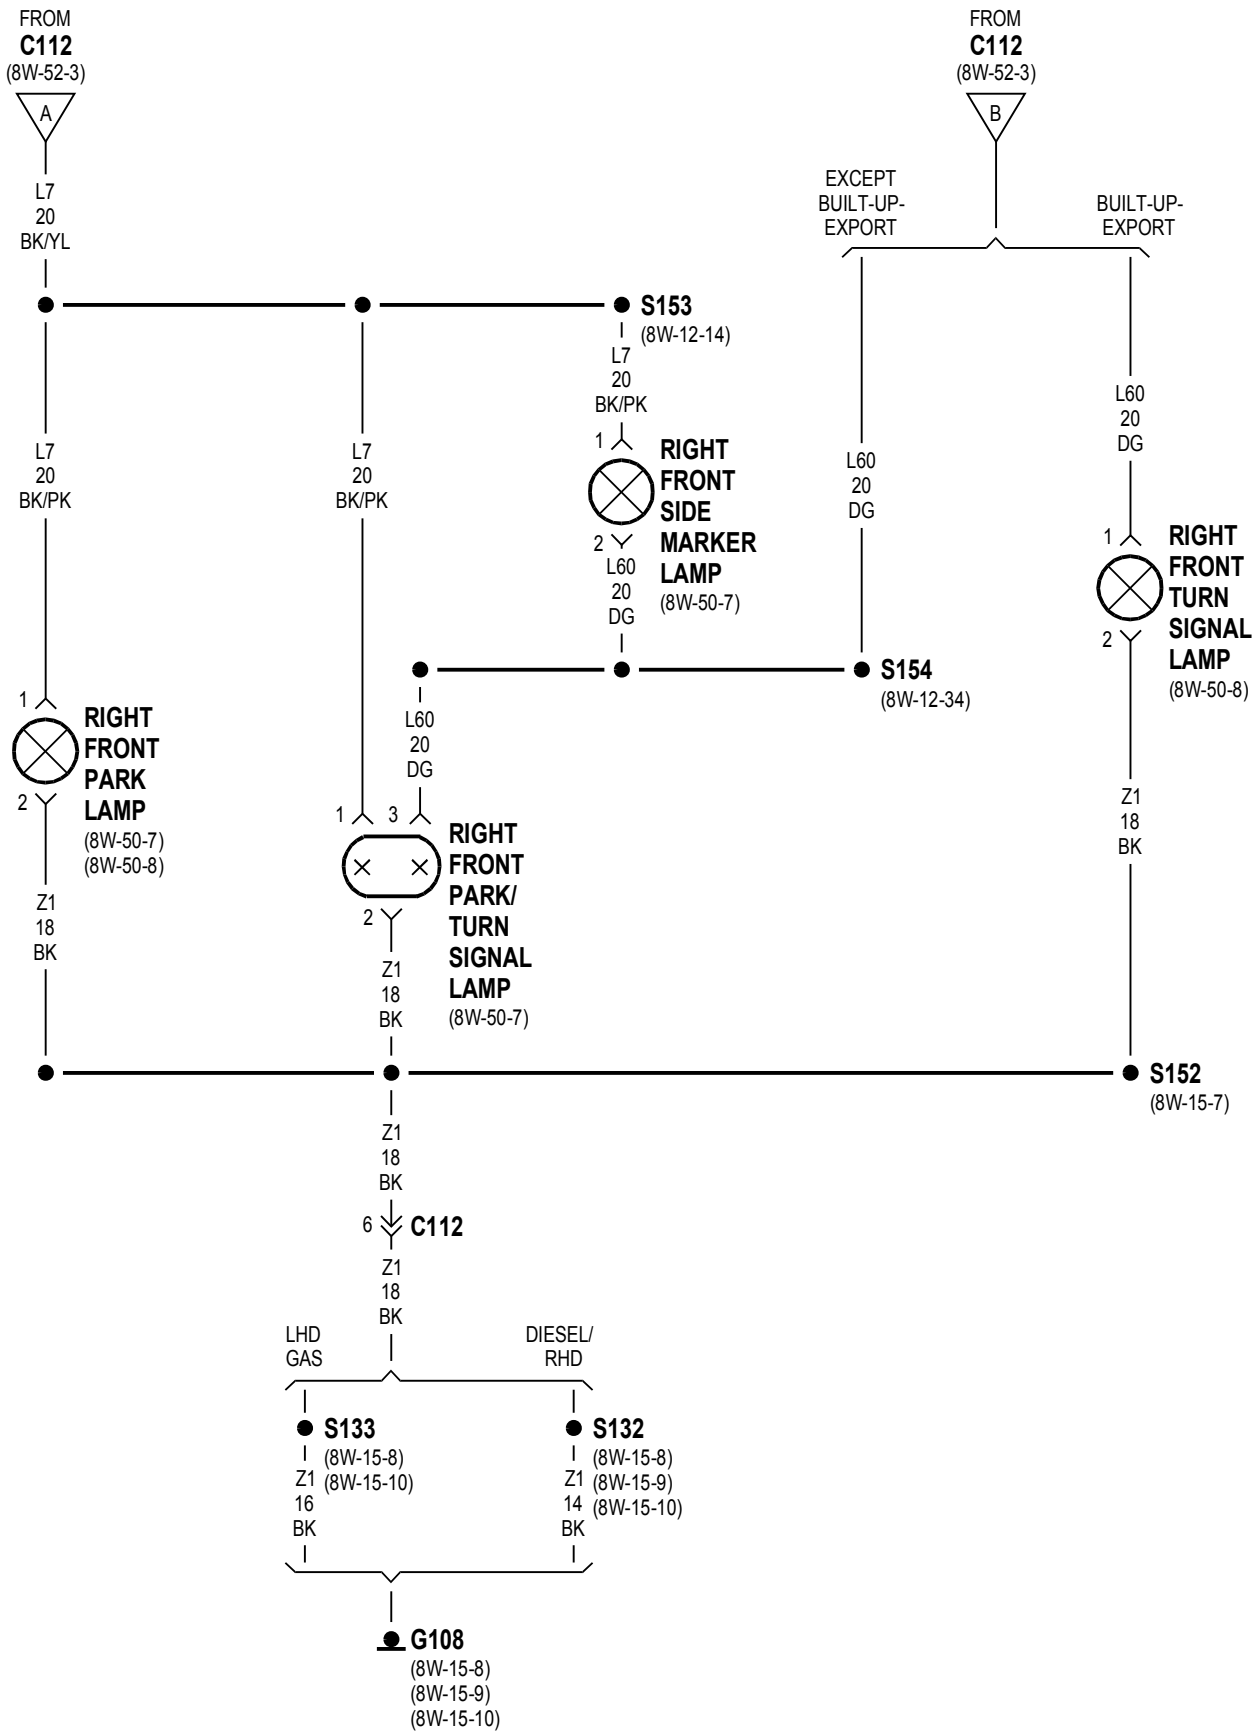

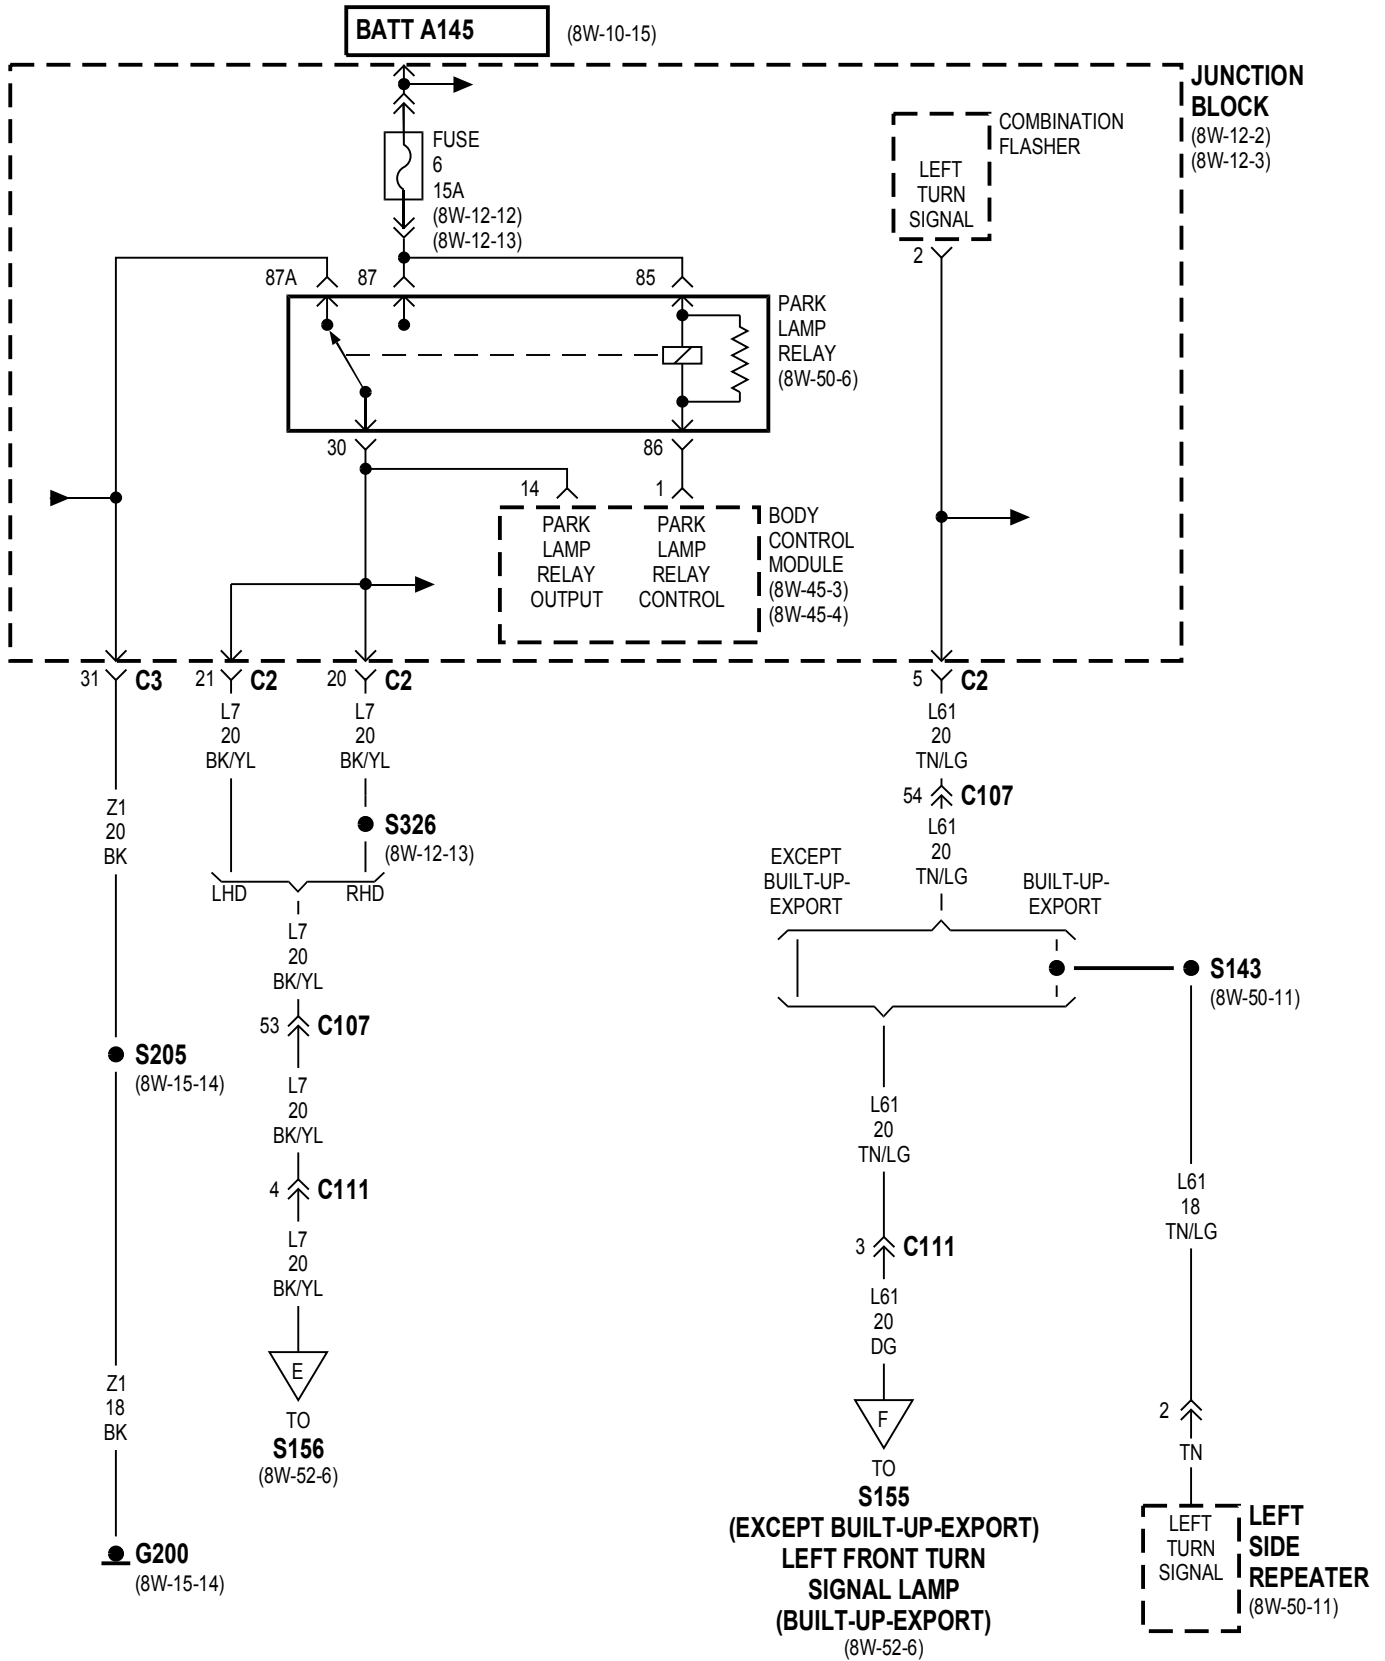

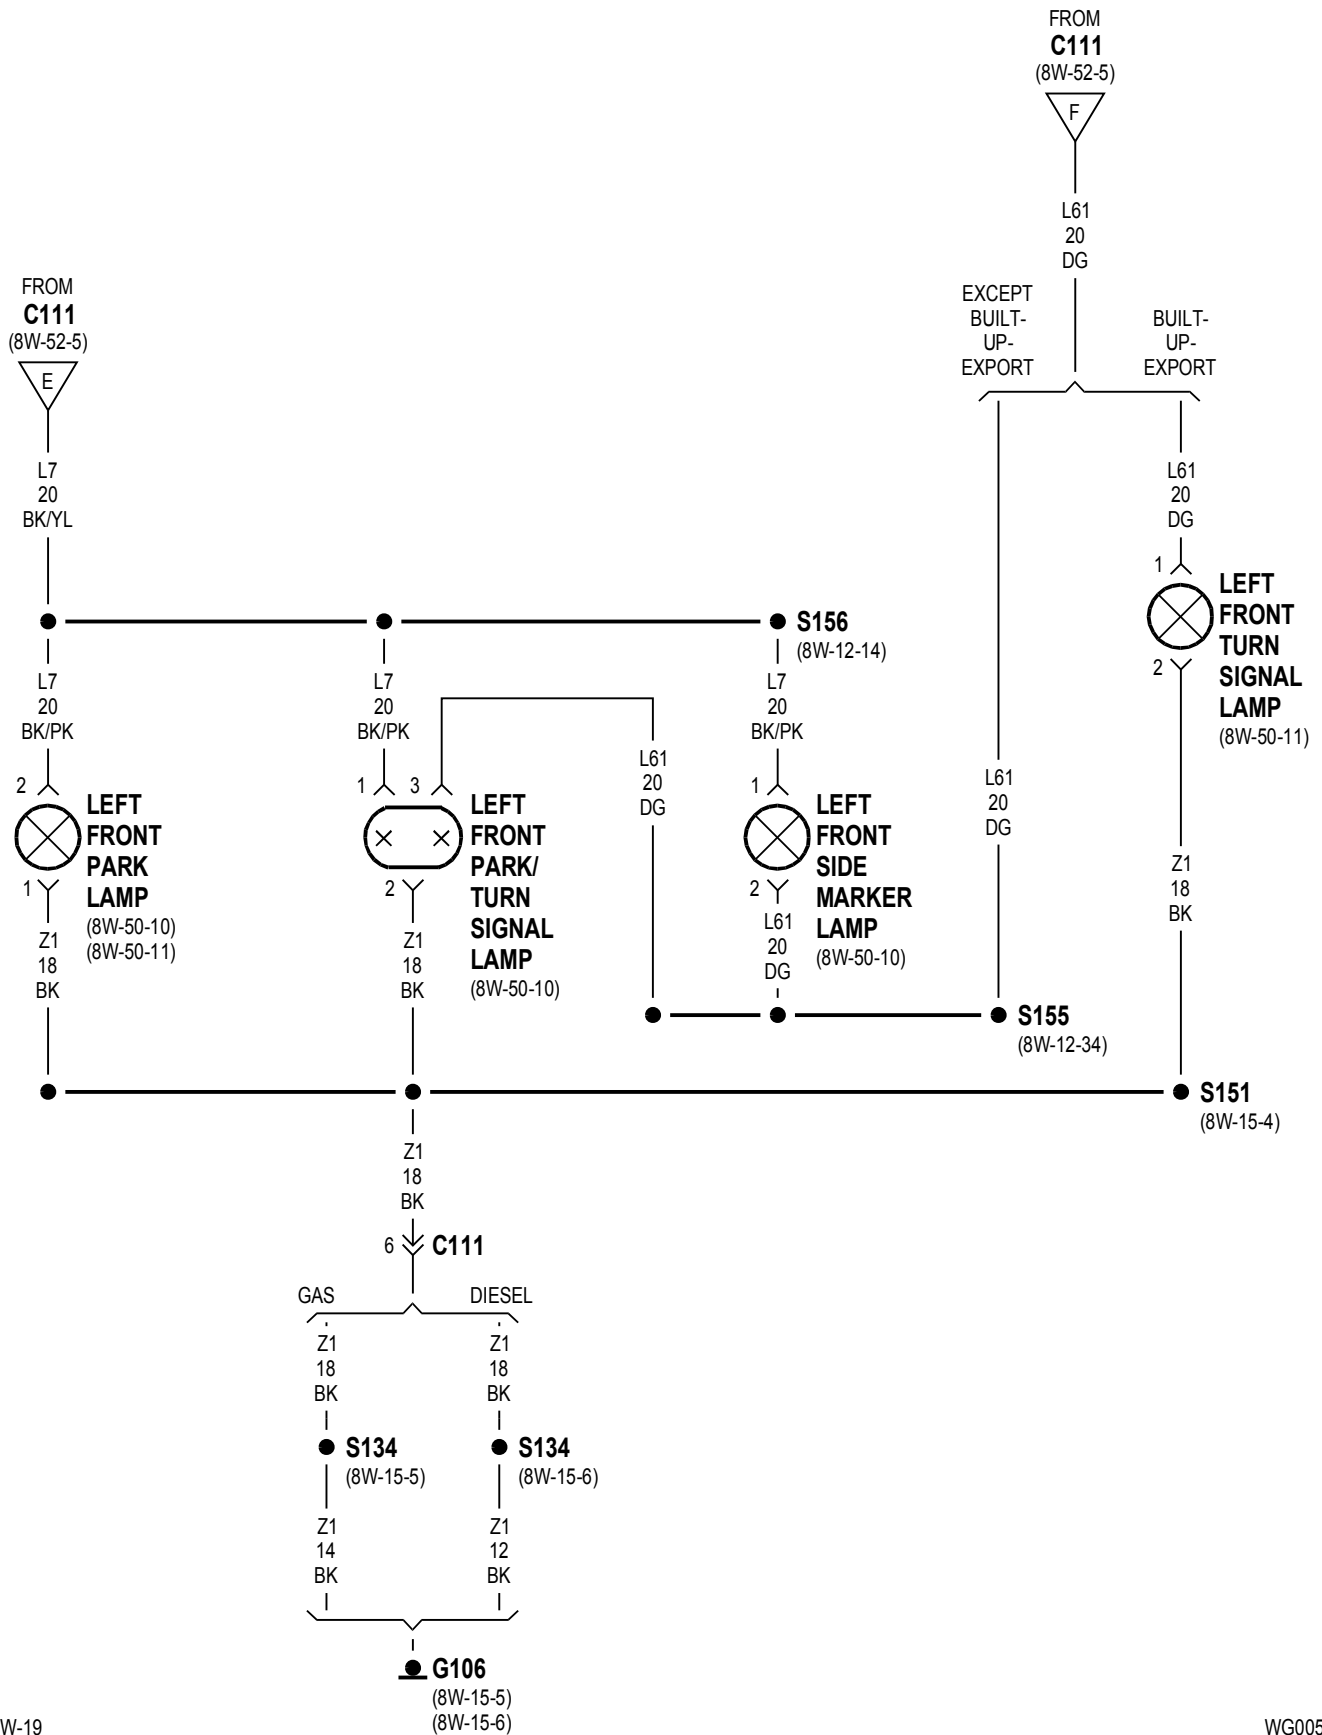

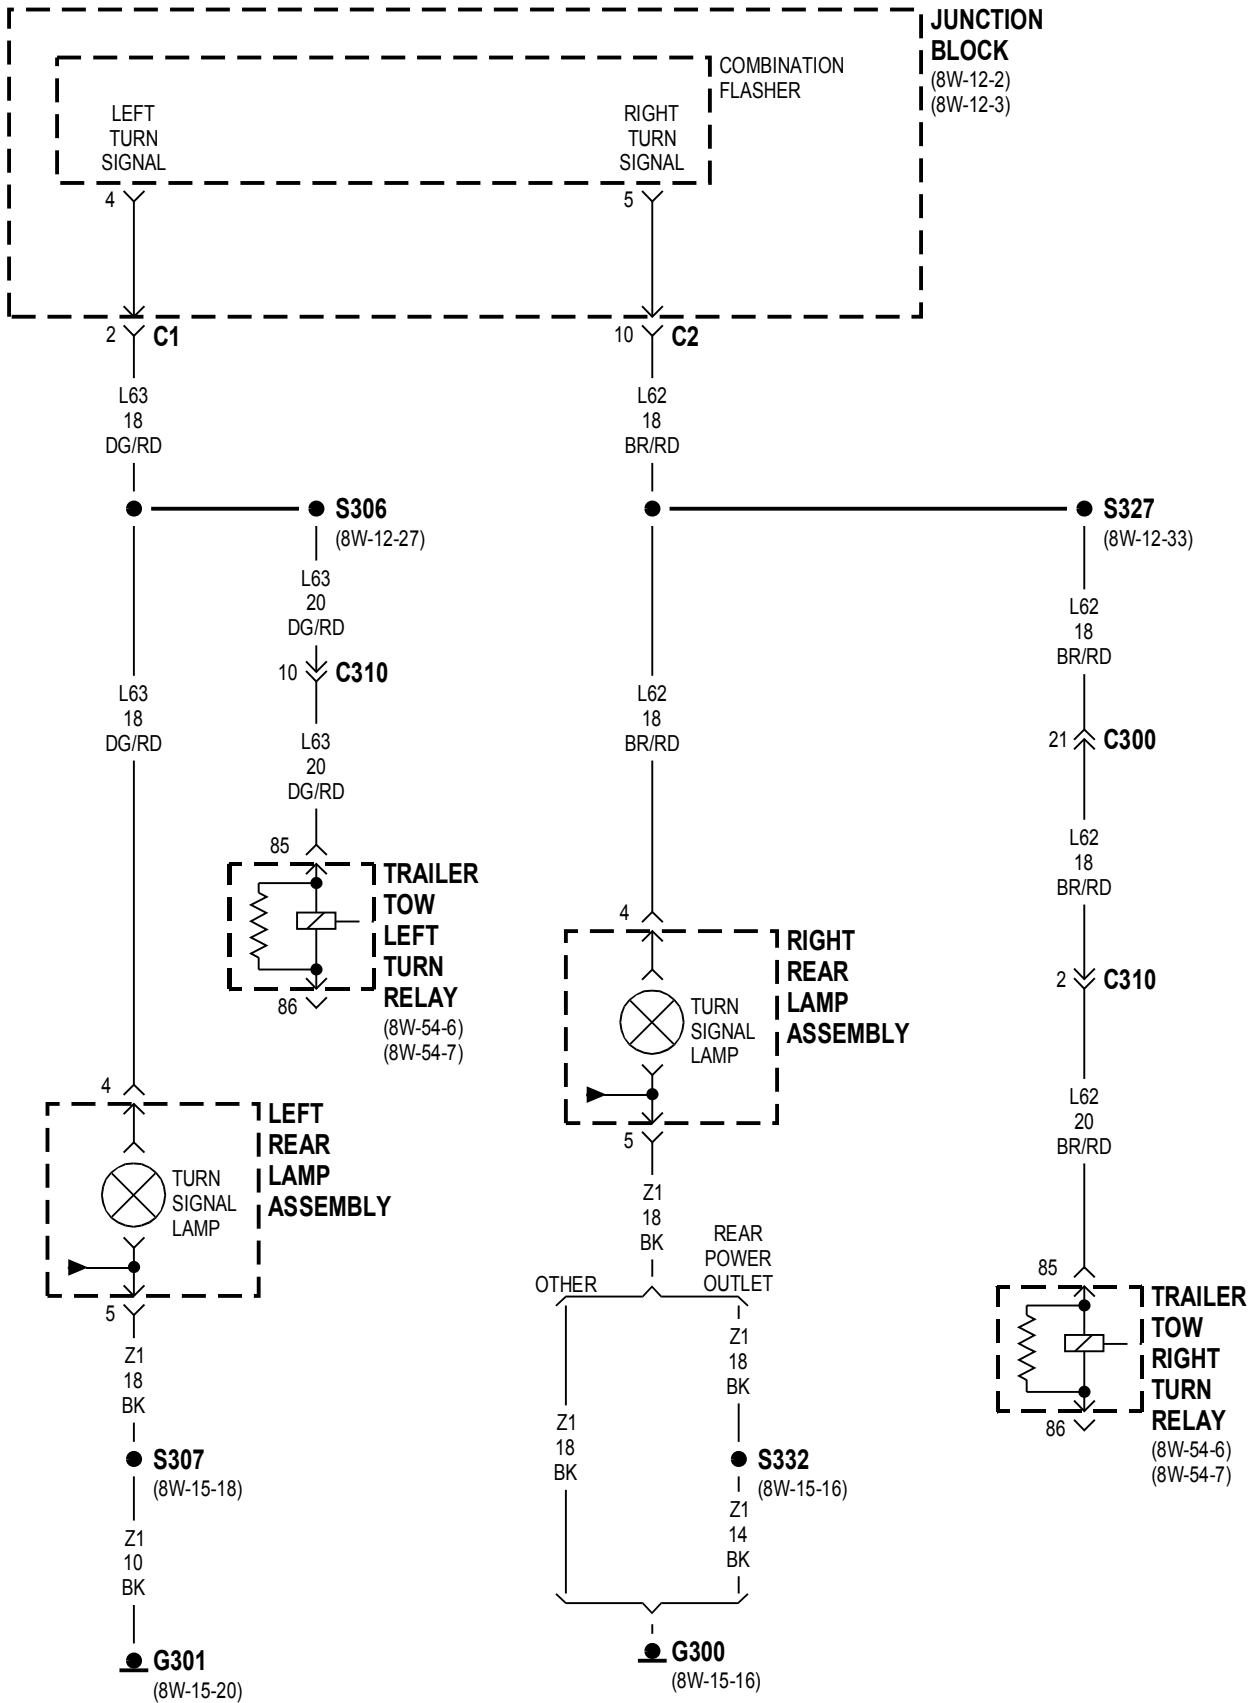

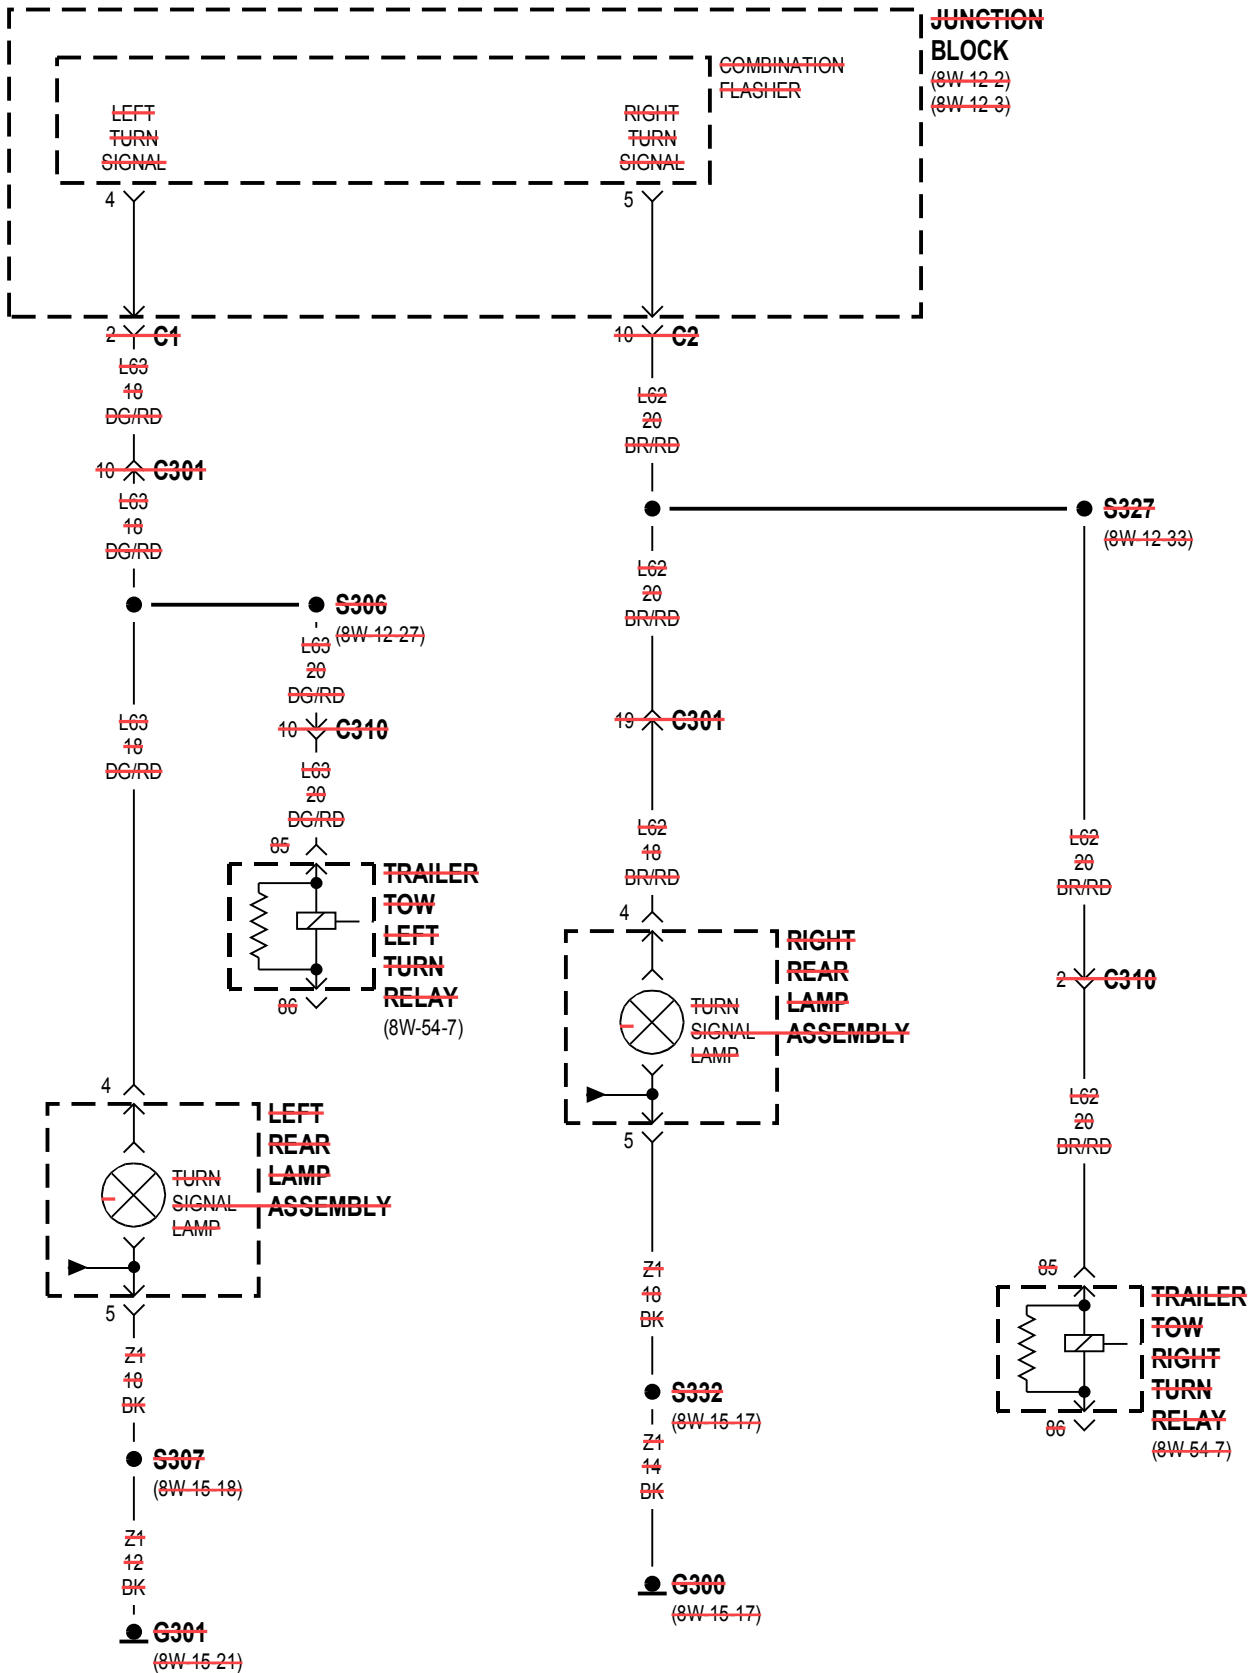

8W-53 WIPERS

Component	Page	Component	Page
Body Control Module	8W-53-2, 3, 4, 5, 6, 7	Rear Washer Pump	8W-53-6, 7
Circuit Breaker No. 1	8W-53-4, 5	Rear Wiper Motor	8W-53-6, 7
Fuse 8 (JB)	8W-53-6, 7	Right Multi-Function Switch . . .	8W-53-2, 3, 4, 5, 6, 7
Fuse 28 (JB)	8W-53-2, 3	Washer Fluid Level Switch	8W-53-2, 3
Fuse 29 (JB)	8W-53-2, 3	Windshield Washer Pump	8W-53-2, 3
G106	8W-53-2, 3, 4, 5, 6, 7	Windshield Wiper Motor	8W-53-4, 5
G108	8W-53-4	Wiper High/Low Relay	8W-53-2, 3, 4, 5
G301	8W-53-6, 7	Wiper On/Off Relay	8W-53-4, 5
Junction Block	8W-53-2, 3, 4, 5, 6, 7		